Instrument Transformer Theory and Testing



Steve Hudson, PE VP of Hardware Engineering

10737 Lexington Drive Knoxville, TN 37932 Phone: (865) 966-5856


www.powermetrix.com



What is a Transformer?

 A TRANSFORMER is a device used to change the voltage levels of electricity to facilitate the transfer of electricity from generating stations to customers. A step-up transformer increases the voltage while a step-down transformer decreases it.

www.duquesnelight.com/understandingelectr icityupdate/electricterms.html

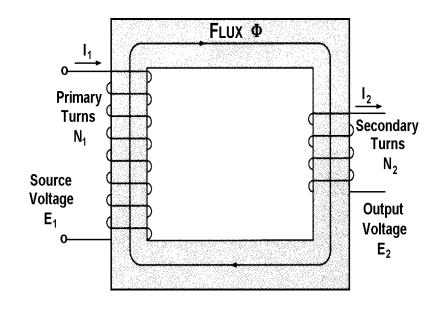



Basic Transformer Theory

- Vp = primary voltage
- Ip = primary current
- Np = primary turns
- Pp = primary power
- Vs = secondary voltage
- Is = secondary current
- Ns = secondary turns
- Ps = secondary power
 This is true for an IDEAL transformer!

$$Vs = \frac{Ns}{Np}Vp$$

$$Is = \frac{Np}{Ns} Ip$$

$$Pp = Vp \bullet Ip = Ps = Vs \bullet Is$$




What is an Instrument Transformer?

Instrument Transformers convert signal levels from dangerous (high voltage) or inconvenient (high current, or current at high voltage) to levels appropriate for metering.

There are two fundamental types:

CTs (Current Transformers)

PTs (Potential Transformers)

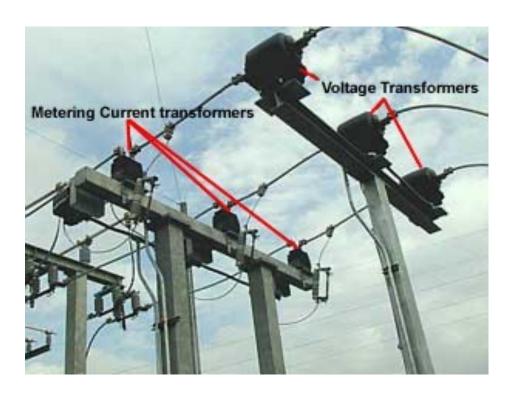



Potential Transformers (PT's)

- PTs step down high voltages to the voltage needed by the meter (usually 120V occasionally 67V).
- They come in many shapes and sizes for different applications
- They work exactly as you would expect them to: Vo=Vi•(Ns/Np).
- They come in various power ratings expressed in VA.
- They come in various accuracy classes, however the 0.3% accuracy class is generally used in North America.





Potential Transformers (PT's)

- PTs are available in Accuracy Classes
 - 1.2 Percent
 - 0.6 Percent
 - 0.3 Percent
- Burdens are expressed in VA

12.5 VA W


25.0 VA

35.0 VA

75.0 VA

200.0 VA

400.0 VA ZZ

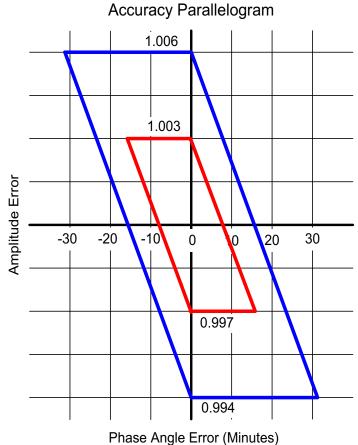



Potential Transformers (PT's)

2:1

2.4:1

2.5:1

4:1

5:1

35:1

40:1

600V Type

240/416

288/500

300/520

480/480

600/600

5K Type

2400/4160 20:1

4200/7280

4800/8320

Medium Voltage

7200/12470

60:1

8400/14560

70:1

12000/20800

100:1

14400/24940

120:1

18000/18000

150:1

200:1

24000/24000

240:1

34500/34500

27600/27600

300:1

High Voltage

Operate quite differently

 May have no direct connection to transformer



Current Transformers (CTs)

- CTs allow the measurement of high currents at potentially high voltages.
- They come in many shapes and sizes for different applications
- They are potentially extremely dangerous.








They can kill you!



Current Transformers (CT's)



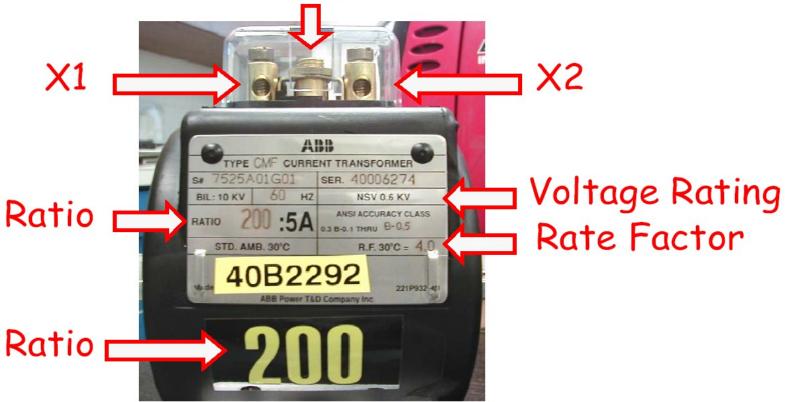



Current Transformers (CT's) Basic Theory

- Basic formula: Is = Ip•(Np/Ns) = Ip/Ns
- Open Circuit Voltage: $V = \sqrt{3.5 \bullet Z_b \bullet I_p / N_s}$
- Where:
 - Zb = Burden Impedance
 - Ip = Primary Current
 - Ns = Number of Secondary Turns (Ratio to 1)


$$V = \sqrt{3.5 \cdot 10^5 \cdot 1000 / 200} = 1320V$$

Tests have shown values ranging from 500 to 11,000 volts.



CT – Accuracy Class/Burden


- Most CTs used in North America are 0.3 (0.3 percent) Class devices.
- When an accuracy class is specified the maximum burden for which the device meets the class accuracy is also specified.

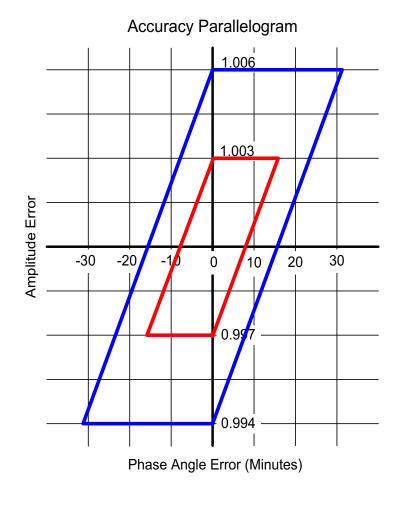




CT - Class 0.3

- Metering error shall be less than 0.3% when the CT is used at FULL RATED LOAD and with rated burden.
- Metering error shall be less than 0.6% when the CT is used between 10% and 100% of full rated load.
- Error is a combination of amplitude and phase error.

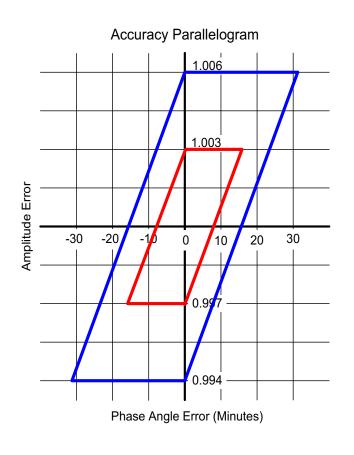




CT – Accuracy – Burden - Load

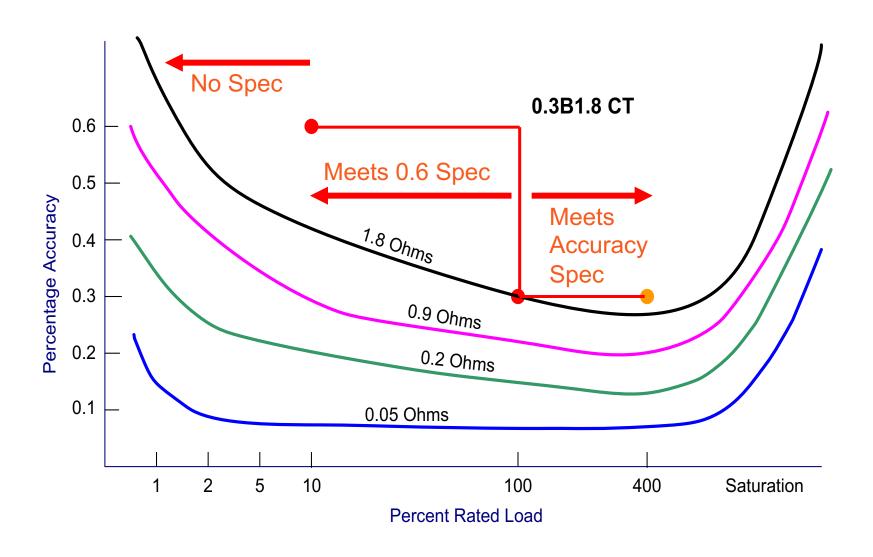




Accuracy Class 0.3

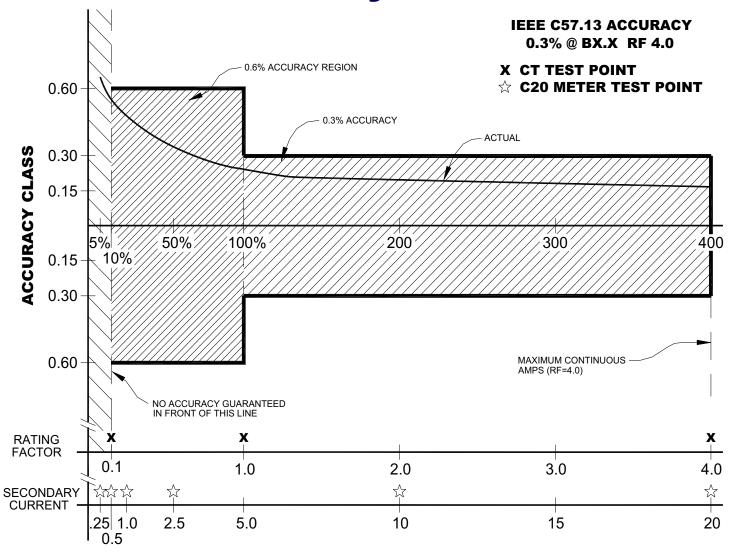






Accuracy Class 0.15

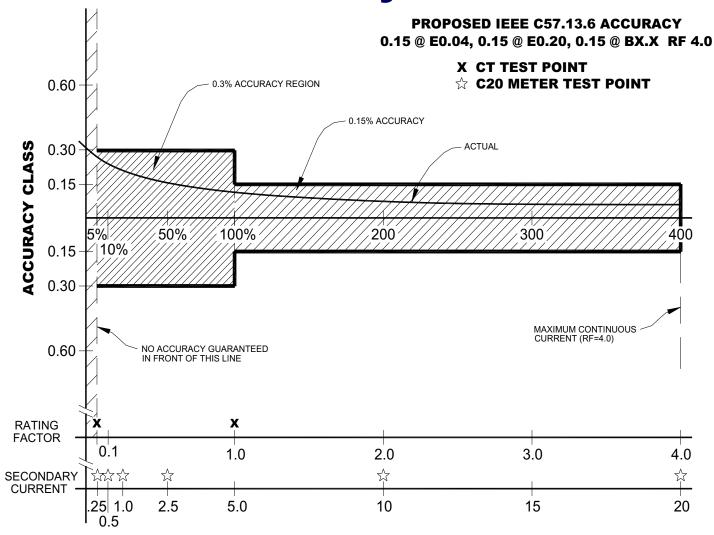






Accuracy Class 0.15S

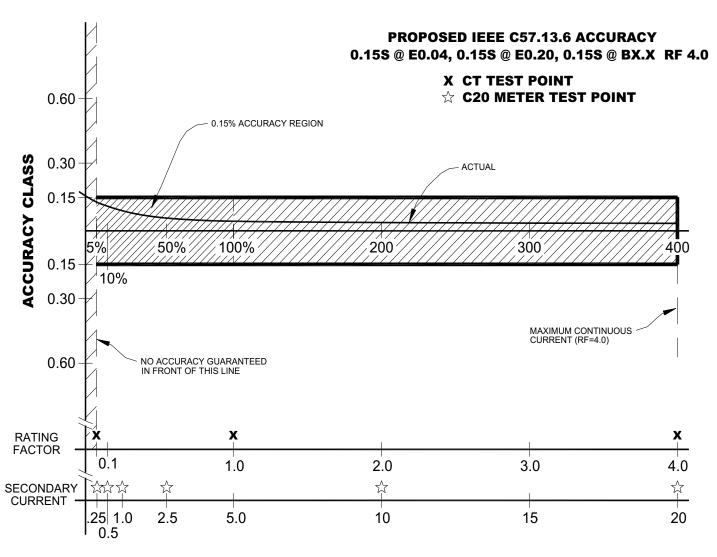



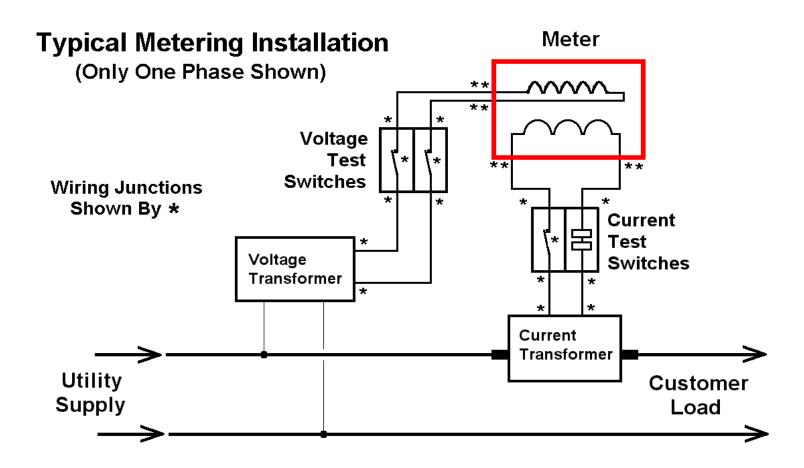



- CTs require a lot of care to insure accurate metering.
 - Burden Over burden reduces CT accuracy.
 - Wiring Faulty or improper wiring reduces accuracy by increasing burden.
 - Shunt Failure to remove the safety shunt will not keep the CT from operating but it will reduce the readings by 50-80%



IEEE Meter Accuracy When you see **Primary** Style **Amps** Number B_{0.1} B_{0.2} a CT spec sheet it will give 50 7524A98G11 2.4 you the burden 100 7524A98G01 150 7524A98G02 1.2 at which the CT 200 0.6 7524A98G03 250 7524A98G04 meets a 300 7524A98G05 0.6 0.6 400 7524A98G06 0.6 specific 0.3 500 7524A98G07 0.3 0.3 600 7524A98G08 accuracy Class 800 7524A98G09 0.3 0.3 7524A98G10 0.3 1000



B_{0.5}

2.4

2.4

0.6

0.6

0.6

0.6

0.3

0.3

- Many CTs are only rated at B0.1 and B0.2
- #16 wire is 4.5 m Ω /ft
- #14 wire is 2.8 m Ω /ft
- #12 wire is 1.8 m Ω /ft
- #10 wire is 1.1 m Ω /ft
- #8 wire is 0.7 mΩ/ft
- 50 ft of #12 wire is nearly 100 mΩ

Primary	Style	IEEE Meter Accuracy			
Amps	Number	B0.1 B0.2 B0.5			
200	7524A85G01	0.3	0.3		
300	7524A85G02	0.3	0.3		
400	7524A83G02	0.3	0.3		
600	7524A83G03	0.3	0.3		
200	7524A85G03	0.3	0.3		
300	7524A85G04	0.3	0.3		
400	7524A83G05	0.3	0.3		
600	7524A83G06	0.3	0.3		



Errors with Instrument Transformers CT - Shunt

 Leaving the shunt in the wrong position produces wrong readings not no readings.



SHUNT CLOSED




SHUNT OPEN



Errors with Instrument Transformers CT - Polarity

- Polarity of the connection matters.
- Wrong polarity means totally wrong metering.
- When PF≠0, reversed polarities may not be obvious.

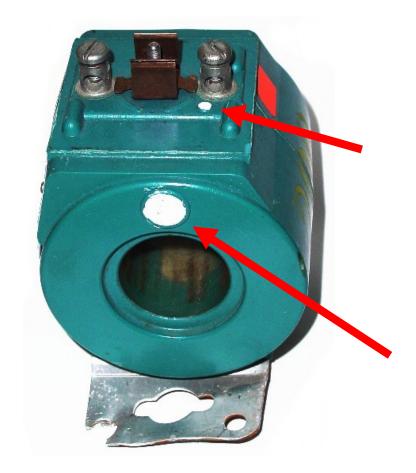




CT Rating FactorThe MOST Misunderstood Spec

- Rating Factor has absolutely nothing to do with burden.
- If a CT has a rating factor of 4 it means that at 30°C it can be used up to 4X its label current and maintain its accuracy Class.



CT Rating Factor

- Rating Factor is a strong function of temperature.
- If a CT has a rating factor of 4 it means that at 30°C it can be used up to 4X its label current and maintain its accuracy Class.
- Operating temperature affects Rating Factor significantly.
 - A CT with RF=4 at 30°C is only RF=3 at 55°C

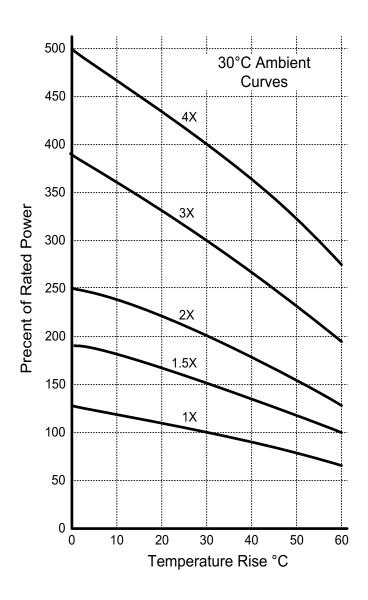



- Four Approaches in use today
 - Direct Burden Measurement
 - Measures voltage and current on CT secondary
 - Most accurate method to determine burden as it is a direct measurement

$$Vs = Is * R \rightarrow R = Vs / Is$$



Direct Burden Measurement

Capture Burden Measurement

Selected Site: 9

CT Burden Measurement

Volts Amps Burden (Ohms)

Phase A: 1.506 2.57 0.5856

Phase B: 0.864 2.48 0.3483

Phase C: 0.410 2.43 0.1689

Test Failed

Retest

Save



- Direct ratio measurement with applied burden
 - An accurate approach tells us relative burden within a range
 - Measures directly the quantity we care about CT Ratio
 - Is more complicated to perform.




- Alternate Approaches
 - Burden only
 - A compromise: tells us if circuit is stable under excess burden
 - Can't give us the ratio which is what we really care about.
 - Admittance Testing
 - Allows us to look for changes from previous measurements.
 - Doesn't directly give ratio
 - ◆ Accuracy typically ±5%




On Site CT Testing

- The meter measures ONLY the voltage and current reaching the meter terminals.
- To verify that the CT is working at the site we have to test the entire circuit.

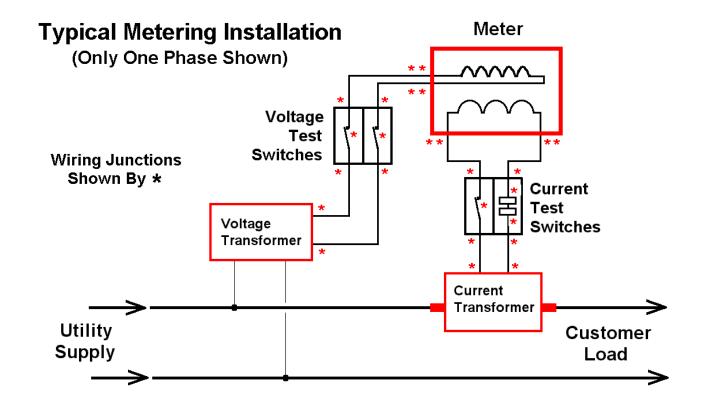



CT Transformers Field Verification – Full Ratio Measurement

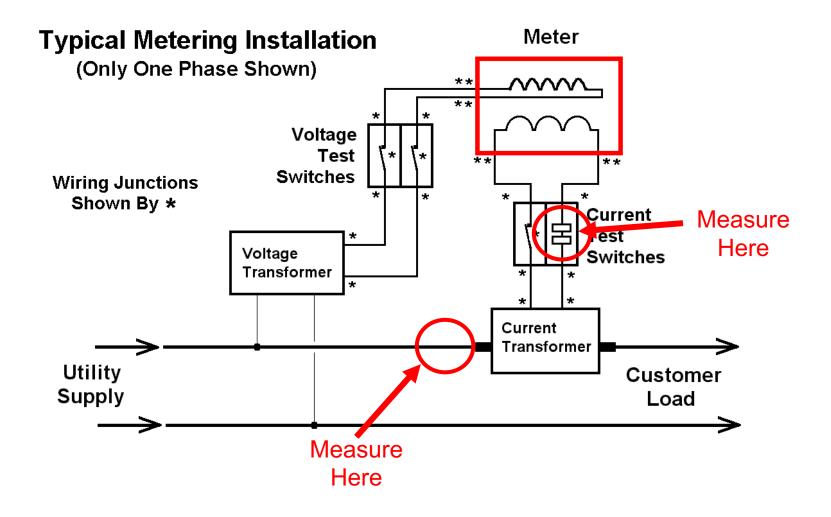



CT Ratio with Burden Testing






- Ratio Testing is the preferred approach when we can gain access to the CT primary.
- Various types of probes can be used for primary side.
 - Flex
 - HV





CT Ratio with Burden Testing

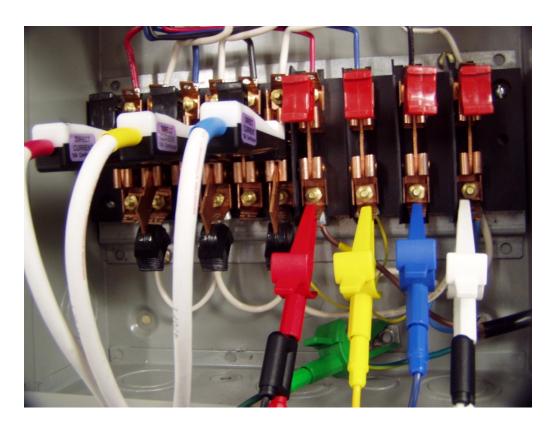


- Secondary connection is made through the test switch
- Same connection that is used for the rest of the site testing.

Ratio Testing with applied burden is the most accurate and complete approach for testing at CT in service.




CT testing can be done with very high accuracy

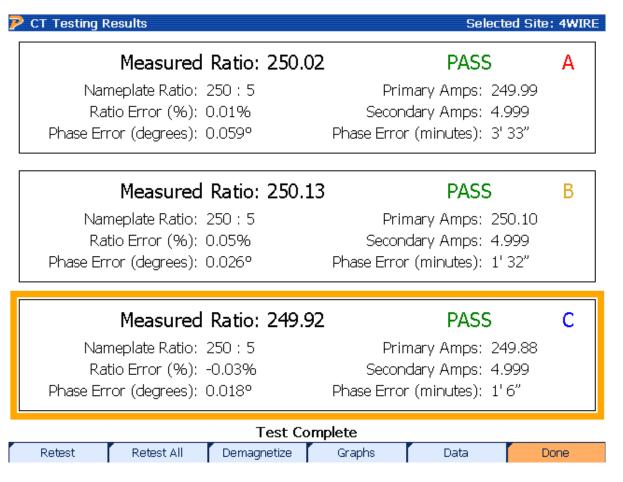

Reference CT measured using PowerMaster with 752 clamp-on probes.
Essentially NO ratio error, phase shift, or change in secondary current versus applied burden.



CT testing can be done with very high accuracy

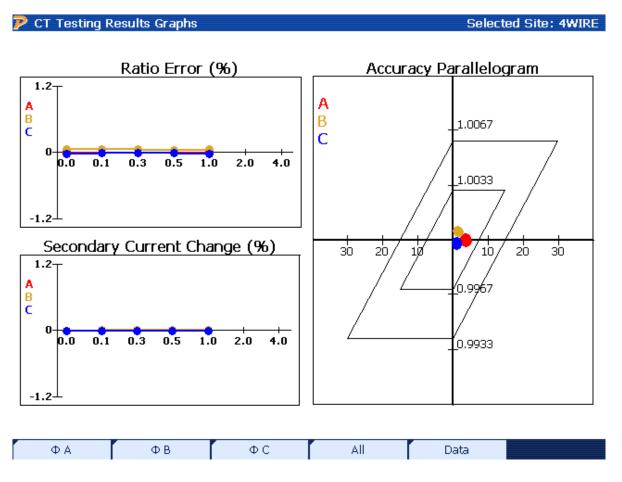

Reference CT measured using PowerMaster with 752 clamp-on probes.
Essentially NO ratio error, phase shift, or change in secondary current versus applied burden.




CT testing can be done with very high accuracy

CT Tes	sting Resul	ts					Selected	l Site: 4V
 € Cha	nge in Se	econdary	Amps					
Phase	Ref	0.0Ω	0.1Ω	0.3Ω	0.5Ω	1.0Ω	2.0Ω	4.0Ω
Α		0.000	0.000	0.000	0.000	0.000	N/A	N/A
В		0.000	0.001	0.001	0.001	0.001	N/A	N/A
С		0.000	-0.001	-0.001	0.000	0.000	N/A	N/A
Ratio D	Data							
Phase	Ref	0.0Ω	0.1Ω	0.3Ω	0.5Ω	1.0Ω	2.0Ω	4.0Ω
Α	250:5	250.02	249.98	249.96	249.98	250.02	N/A	N/A
В	250:5	250.13	250.13	250.13	250.12	250.13	N/A	N/A
С	250:5	249.92	249.97	249.96	249.96	249.96	N/A	N/A
Ratio E	rror (%))						
Phase	Ref	0.0Ω	0.1Ω	0.3Ω	0.5Ω	1.0Ω	2.0Ω	4.0Ω
Α		0.01	-0.01	-0.02	-0.01	0.01	N/A	N/A
В		0.05	0.05	0.05	0.05	0.05	N/A	N/A
С		-0.03	-0.01	-0.02	-0.02	-0.02	N/A	N/A
Relativ	e Phase I	Data (de	grees)					
Phase	Ref	0.0Ω	0.1Ω	0.3Ω	0.5Ω	1.0Ω	2.0Ω	4.0Ω
A		0.06	0.07	0.06	0.07	0.06	N/A	N/A
В		0.03	0.03	0.02	0.03	0.02	N/A	N/A
С		0.02	0.02	0.02	0.02	0.02	N/A	N/A

Reference CT measured using PowerMaster with 752 clamp-on probes.
Essentially NO ratio error, phase shift, or change in secondary current versus applied burden.



CTs installations can be fully verified in the field

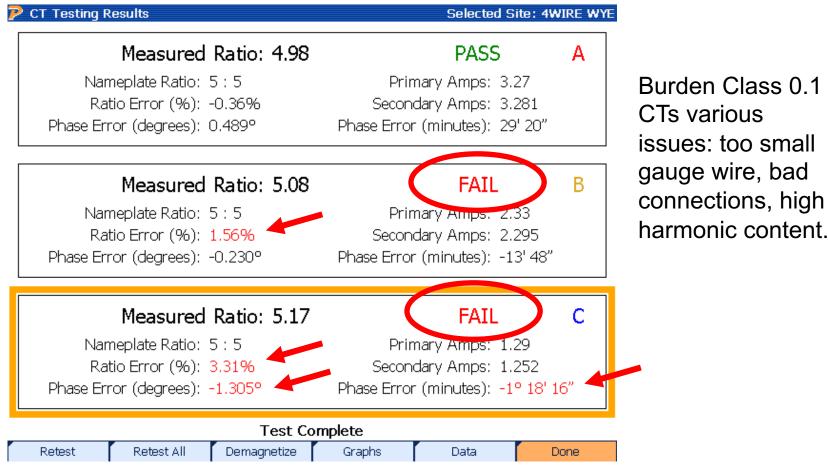

POWERMETRIX

We can verify that the ratio is correct and constant as burden changes.

CTs installations can be fully verified in the field

Testing Results Graphs BETA TEST - p16.23M/v16.38M/c#340.61K - Selected Site: Accuracy Parallelogram Ratio Error (%) **-**1.045 В 1.03 0.0 0.1 0.3 0.5 1.0 2.0 -1.015 Secondary Current Change (%) -105 -70/ 105 **5**.985 В -0.97 **93** 0,5 1.0 2.0 4.0 -0.955 -504

ΦВ


Burden Class 0.1 CTs



Data



CTs installations can be fully verified in the field

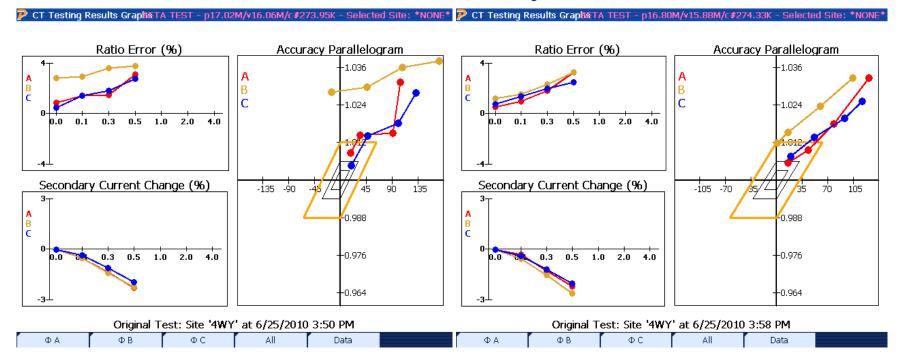


CT Phase B highly harmonic load.

CT Phase B harmonic load removed.

Same CT in BOTH cases.




CTs installations can be fully verified in the field

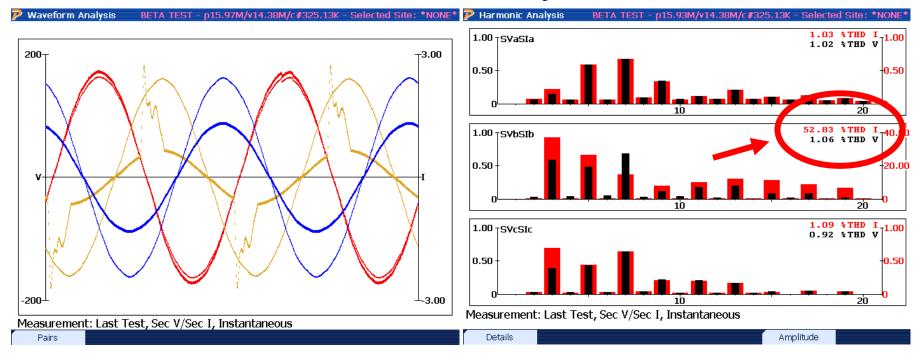

These are the waveforms and harmonics when the CT failed.



CTs installations can be fully verified in the field

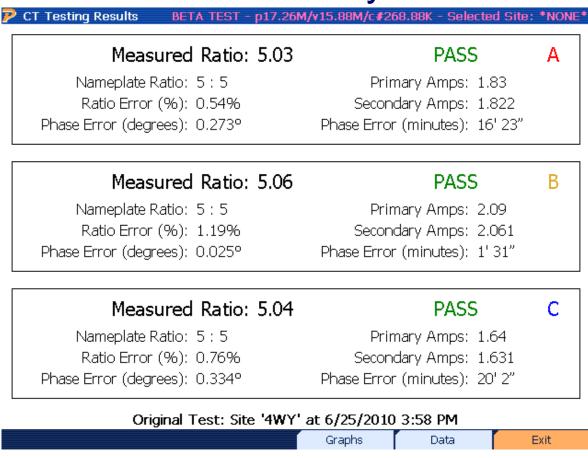


Without the harmonic load this CT passed it's test.



Testing Current TransformersRatio Error – In Whose Favor?

I did at CT ratio test. What does it mean when I measure a ratio of 99.68:5 on a 100:5 CT?

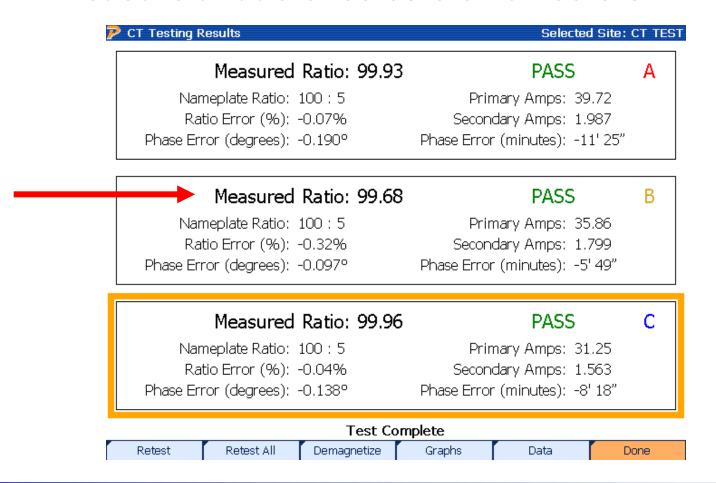



Testing Current TransformersRatio Error – In Whose Favor?

In the phase B test we measured 35.86 amps on the primary and 1.799 secondary amps.

Ratio = 5.0 * (Primary / Secondary) = 99.68

If the ratio had been 100:5 and the primary was 35.86 amps we should have measured 1.793 amps on the secondary.


We measured 1.799 – MORE than we should have.

Therefore a tested ratio of 99.68 means that we are measuring more current than we should. This error is in our favor.



Testing Current Transformers Ratio Error – In Whose Favor?

Suppose we add burden to the metering circuit.

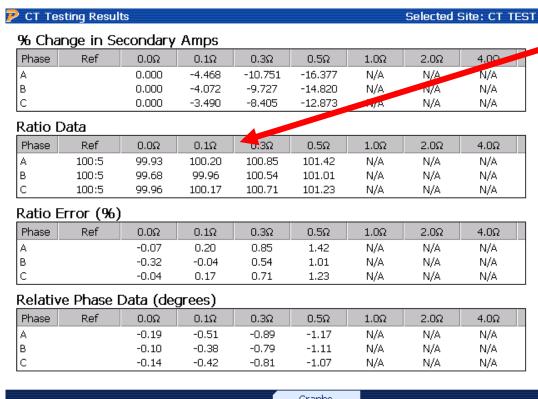


Notice that the ratio increases as we apply burden. With 0.3 Ohms of burden the ratio switches from less than 100:5 to greater than 100:5. This is the point where things swing to being in favor of the customer



Testing Current Transformers Burden Test Only

• If we cannot get to the primary side of the CT we can check that the output is constant as burden changes.

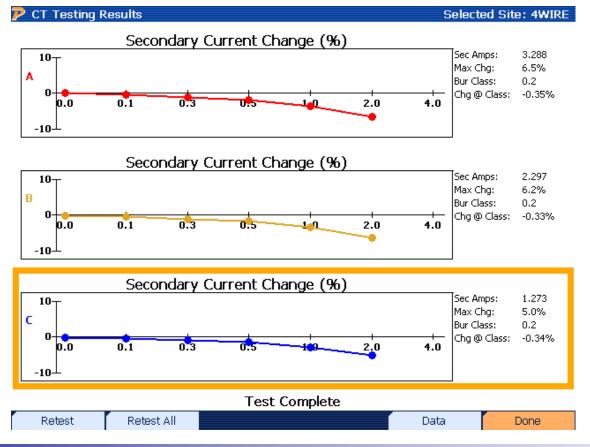


Burden Class 0.2 CTs can look quite bad but actually be within specs.



Testing Current Transformers Burden Test Only

• If we cannot get to the primary side of the CT we can check that the output is constant as burden changes.

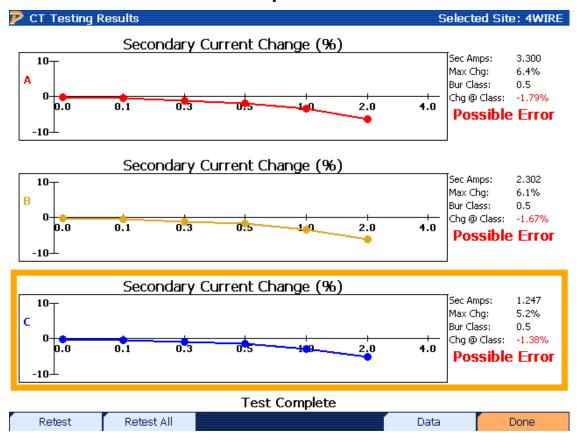


Same performance from Burden Class 0.5 CTs is well out of specification.

A burden only test that is GOOD probably means the CT is GOOD. A test that is bad may mean nothing.




CT – Accuracy – Burden - Load

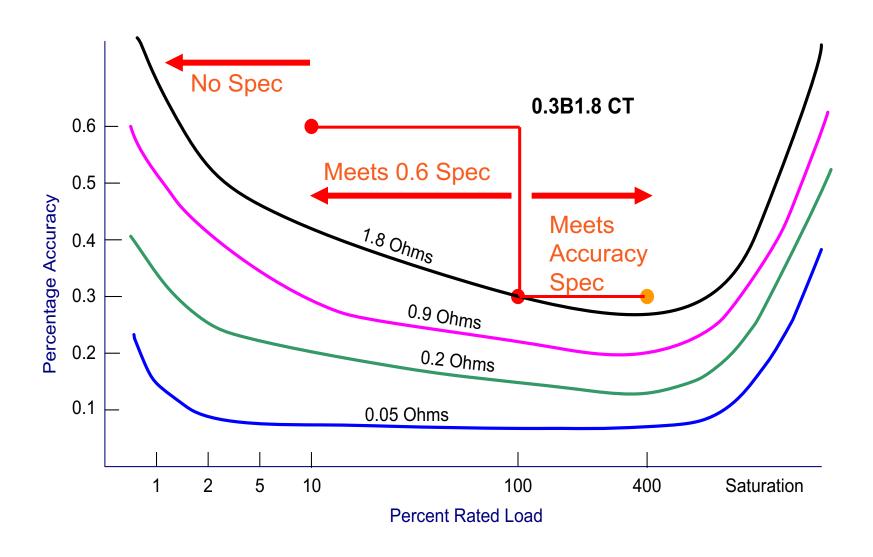



Same site as above: What went wrong???

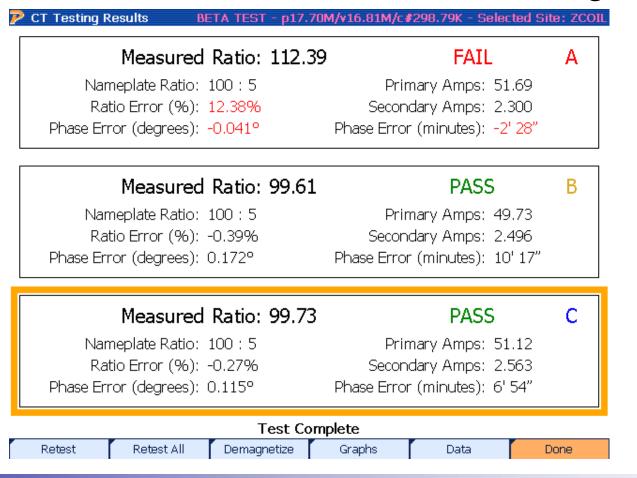




Same site as above: What went wrong???

CT Testing Results GraphsBETA TEST - p17.27M/v16.81M/c#303.89K - Selected Site: ZCOII

Ratio Error (%) Accuracy Parallelogram 100 --1.468 -1.312 0.5 1.0 2.0 -100-Secondary Current Change (%) -40 -20 20 40₋ -0.844 0.3 0.5 1.0 2.0 4.0 -0.688 -0.532 -40[⊥] ΦС Data




Same site as above: What went wrong???

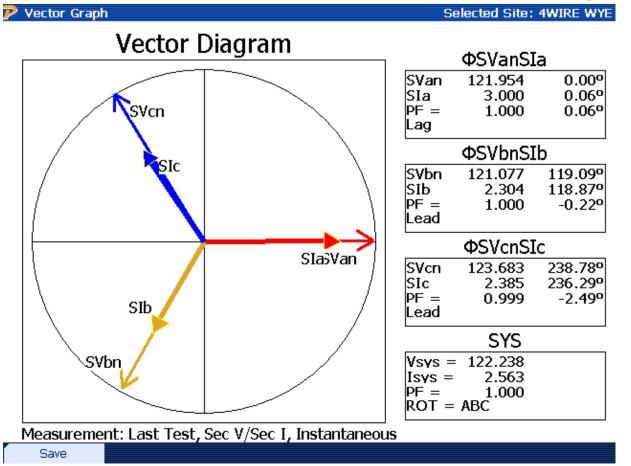



Testing Current TransformersWhat's Wrong? → Power Theft

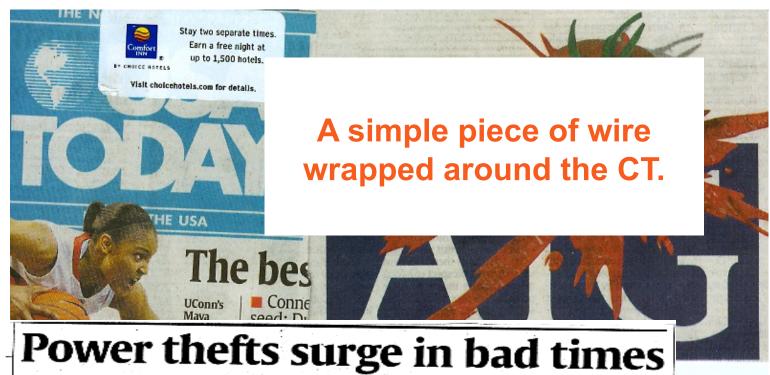

It's dangerous, and other consumers pick up the tab

By Paul Davidson USA TODAY

As the dismal economy spawns desperate measures, some Americans are resorting to a hazardous practice: stealing electricity.


Many utilities say energy theft has risen sharply during the economic downturn. Culprits include

vice was turned off in early 2008, 30% were illegally using electricity late last year, utility PECO says.


Customers have stolen power for decades, costing utilities 1% to 3% of revenue — or about \$6 billion industrywide — each year, according to *Electric Light & Power* magazine. Losses are borne by other customers. Many thieves operate home-based marijuana farms that use lots of lights.

But the problem is mushrooming. In Pennsylvania, utility PPL says thefts rose 16% last year, with fewer drug-related incidents and more tied to ser-



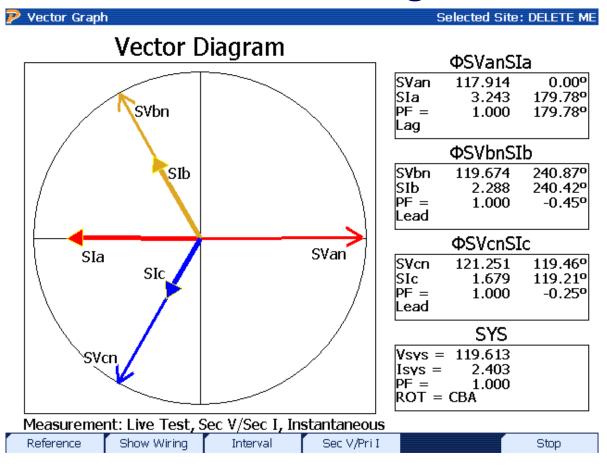



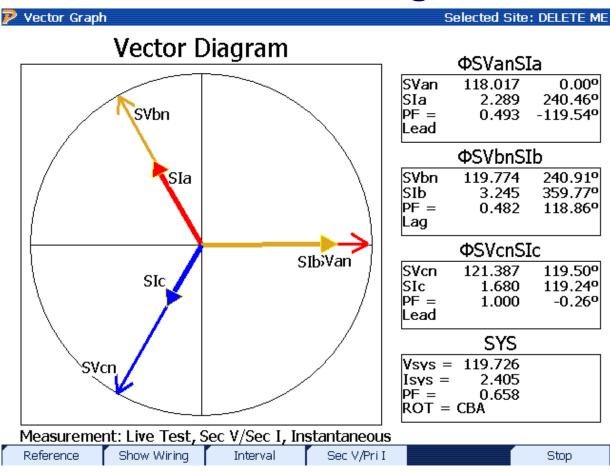





Questions? Comments?
Want a copy of this presentation?
Go to

powermetrix.com/presentations/

Thank you for your time!



