POWERMETRIX
EXCELLENCE IN TESTING

Entering Calibration Numbers for CT Ratio Probes

1. Plug battery charger into Powermate unit.
2. At Main Menu, press Ctrl key.
3. Press 8 key to “Enter Password For Edits.”
4. Enter password as “AMPS”, press Enter
5. At Control Menu, press 2 key to enter “CT Test Probe Calibrations.”
6. If new probe set, enter name of Current Set
   (Ex. FLEX36, HV-OPT, PX604, PX800, PX830 , etc.)

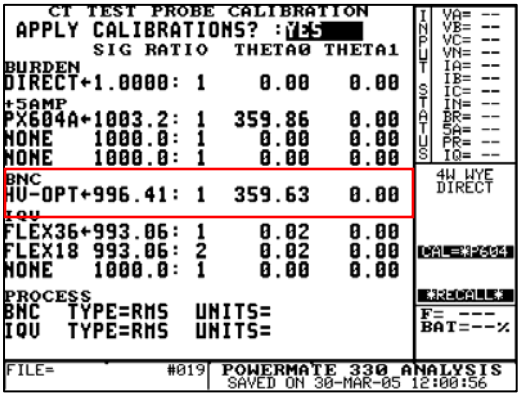

7. Enter “Sig Ratio” & “Theta 0” to each corresponding phase.
   Ex. HV-OPT 996.41 359.63
   (Note: Default values should be 1000:1 0.00 0.00)
8. After entry of calibration numbers, press F1 key to “Accept Values.”
9. At Control Menu, press 7 key to “Save Probe Calibrations.”
10. During save process, DO NOT press any other key or turn unit Off!!!
11. After save, press F5 to return to Main Menu.